


The JA-112I BUS section/output activation indicator

The JA-112I is a component of the JABLOTRON 100+ system. It is used for the optical indication of the status of individual system sections (set/unset) or the status of programmable outputs. The indicator should be installed by a trained technician with a valid certificate issued by an authorized distributor.

Installation

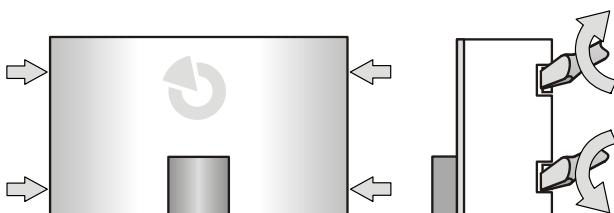

1. Open the indicator cover by loosening the four tabs by twisting them in the direction indicated by the arrows using a suitable screwdriver.
2. Remove the board from the base by pressing the tab (1).

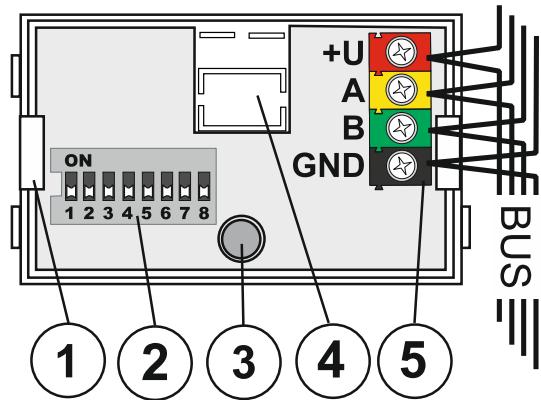


Figure 1: 1 – board tab; 2 – configuration switches;
3 – red indicator LED; 4 – punchable opening; 5 – BUS terminals

3. Use the switches (2) to set the section number (see Tab. 1) or PG output (see Tab. 2) which should be indicated.
4. Push the cable through the hole (4) punched in the base and attach the base to the selected place.
5. Push the indicator board back in place and connect the BUS cable to the terminals (5).



When connecting the module to the system BUS, always switch the power off.

If the indicator is installed outside the protected area, a JA-110T BUS insulator should be used.

6. When you have switched the system on, test the functioning of the indicator.
7. Reinsert the indicator cover.

ON	SC	1
ON	SC	2
ON	SC	3
ON	SC	4
ON	SC	5
ON	SC	6
ON	SC	7
ON	SC	8
ON	SECTION: SET	9
ON	SC	10
ON	SC	11
ON	SC	12
ON	SC	13
ON	SC	14
ON	SC	15

Tab. 1 - Section indication setting

ON	PG	1
ON	PG	2
ON	PG	3
ON	PG	4
ON	PG	5
ON	PG	6
ON	PG	7
ON	PG	8
ON	PG	9
ON	PG	10
ON	PG	11
ON	PG	12
ON	PG	13
ON	PG	14
ON	PG	15
ON	PG	16
ON	PG	17
ON	PG	18
ON	PG	19
ON	PG	20
ON	PG	21
ON	PG	22
ON	PG	23
ON	PG	24

ON	PG	33
ON	PG	34
ON	PG	35
ON	PG	36
ON	PG	37
ON	PG	38
ON	PG	39
ON	PG	40
ON	PG	41
ON	PG	42
ON	PG	43
ON	PG	44
ON	PG	45
ON	PG	46
ON	PG	47
ON	PG	48
ON	PG	49
ON	PG	50
ON	PG	51
ON	PG	52
ON	PG	53
ON	PG	54
ON	PG	55
ON	PG	56

ON	PG	65
ON	PG	66
ON	PG	67
ON	PG	68
ON	PG	69
ON	PG	70
ON	PG	71
ON	PG	72
ON	PG	73
ON	PG	74
ON	PG	75
ON	PG	76
ON	PG	77
ON	PG	78
ON	PG	79
ON	PG	80
ON	PG	81
ON	PG	82
ON	PG	83
ON	PG	84
ON	PG	85
ON	PG	86
ON	PG	87
ON	PG	88

ON	PG	97
ON	PG	98
ON	PG	99
ON	PG	100
ON	PG	101
ON	PG	102
ON	PG	103
ON	PG	104
ON	PG	105
ON	PG	106
ON	PG	107
ON	PG	108
ON	PG	109
ON	PG	110
ON	PG	111
ON	PG	112
ON	PG	113
ON	PG	114
ON	PG	115
ON	PG	116
ON	PG	117
ON	PG	118
ON	PG	119
ON	PG	120

Tab. 2 - PG output indication setting

The JA-112I BUS section/output activation indicator

Notes:

- The indicator does not occupy any position in the control panel (it is not enrolled to the system).
- If you enroll multiple indicators with identical settings to the system, they will indicate identically.
- The number of indicators is only limited by the power consumption from the BUS.

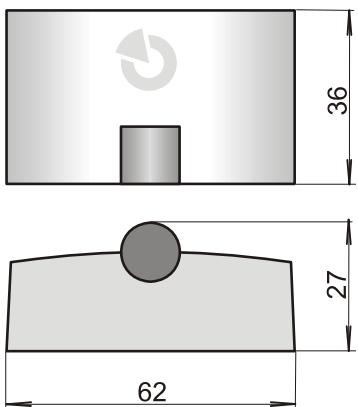


Figure 2: The JA-112I indicator dimensions

Technical specifications

Power	from control panel BUS 12 V DC (9...15 V)
Standby power consumption (LED on/off)	6 mA/3 mA
Current consumption for cable selection	5 mA
Dimensions	62 x 36 x 27 mm,
Weight	26 g
Operational environment	indoor general
Operational temperature range	-10 °C to +40 °C
Average operational humidity	75 % RH, non-condensing
Complies with	EN 50130-4 ed. 2+A1, EN 55032, EN 50581



JABLOTRON ALARMS a.s. hereby declares that the JA-112I is in a compliance with the relevant European Union harmonisation legislation: Directives No: 2014/30/EU, 2011/65/EU, when used as intended. The original of the conformity assessment can be found at www.jablotron.com – Section Downloads.



Note: Although this product does not contain any harmful materials we suggest you return the product to the dealer or directly to the producer after use.