

JA-183M Wireless magnetic door detector

The JA-183M is a component of Jablotron's alarm system. It is designed to detect the opening of doors, windows etc. The battery-powered detector communicates via Jablotron radio protocol.

Installation

Installation shall only be undertaken by technicians holding a certificate issued by an authorized distributor.

Choose the suitable place for detector's installation. The detector reacts to the removal of its magnet unit. The electronics should be installed onto the non-moving part of windows or doors, and the magnet onto the moving part. Avoid locating it directly on a metal frame as metal influences the functioning of the magnetic sensor and radio communication.

1. Open the detector cover by pressing the tab in. (Fig. 1)

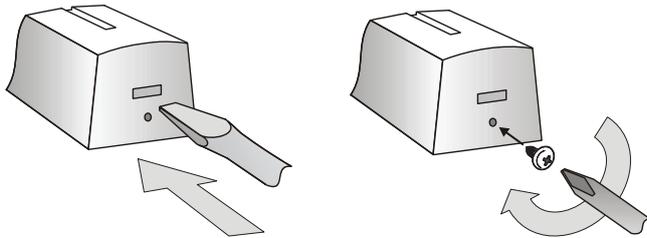


Fig. 1 and 2

2. Screw the rear cover to the solid part of the door/window. The marks A and B show the right position of the magnet. (Fig. 3)

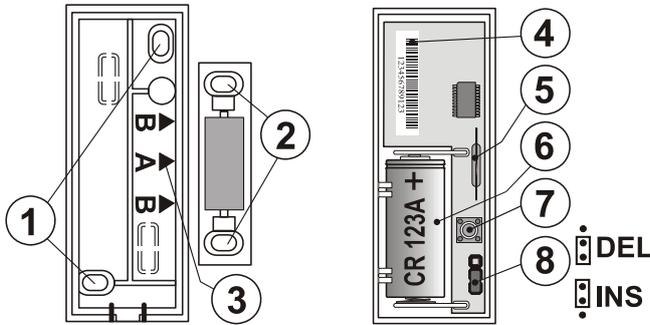


Fig. 3 and 4 - 1. mounting holes of the detector; 2. mounting holes of the magnet A, 3. magnet A and B position marks; 4. serial number; 5. reed contact; 6. battery CR123A; 7. tamper; 8. settings jumper

3. Attach the magnet to the moving part of the window. The standard magnet in a plastic housing opposite the A arrow and the whorl shape magnet against the B arrow. Its distance from the detector should be as small as possible when the door/window is closed. In the picture Fig. 5 and Fig. 6 are shown the reaction areas for magnets in millimeters in three axes of movement and on the non-magnetic / magnetic surface. **Note:** Use the supplied plastic part to compensate the possible height difference for magnet A.

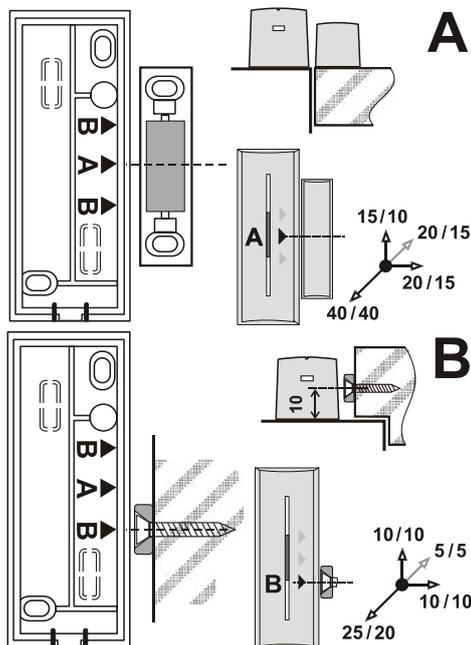


Fig. 5 and 6

4. Enroll the detector into the control panel (receiver). Check its manual for more info. The enrollment signal is transmitted when the battery is inserted. **Note:** To enroll a detector after having already connected a battery, first disconnect the battery, and press and release the tamper sensor to discharge any remaining charge to get the device ready for enrolment.
5. Set the detector's reaction See settings chapter.
6. Mount the front cover onto the rear part
7. Test the detector's function.
8. The tab can be fixed using supplied screw (Fig. 2).

Settings

The **DEL** position of the jumper provides entrance & exit delays for detectors installed in a building entrance. **INS** position allows the detector to instantly trigger alarm activation if the control panel is armed.

Note: This DIP switch (INS/DEL) only has an effect if the detector has a natural reaction assigned to its address in the Jablotron control panel. It also has no effect when used with a JA-182N or JA-180N receiver.

The detector has two different modes. The mode is indicated by one or two short flash when the battery is inserted.

One flash means that it indicates both opening and closing the door or window. The control panel knows the status of doors / windows. Two flashes means the pulse mode in which the detector indicates only opening the door or window.

The mode can be set (changed) when keeping the tamper switch pressed while installing the battery for 3 to 5 seconds.

Testing the detector

15 minutes after closing the detector cover, the LED indicates detector triggering. The strength and quality of detector signals can be measured by the control panel in Service mode.

Battery replacement

The detector monitors its battery voltage and if too low, a report is sent to the control panel to inform the installer or user. The detector continues to function and shows each triggering of the detector with a flash of its LED. Battery replacement should not be delayed by more than two weeks. This should be done by a qualified technician with the control panel in Service mode.

Note: If a partly discharged battery is inserted then the LED start flashing for one minute. Then the detector will work but the Lo Bat signal will be send to the control panel. Expired batteries should not be thrown into the garbage, but disposed of according to local regulations.

Removing the detector from the system

If a detector is removed, the control panel reports the removal. The detector has to be deleted in the control panel before intentional removal.

Technical parameters

Voltage:	Lithium battery type CR123A (3,0V 1,5 Ah)
Typ. battery lifetime:	approx. 3 years for max.20 daily activations
Communication band:	868.1 MHz, Jablotron protocol
Communication range:	approx. 300m (open area)
Typical sensitivity range:	see Fig. 5 and Fig. 6
Dimensions:	transmitter part 75 x 31 x 23 mm
Operational environment according to EN 50131-1:	A magnet: 56 x 16 x 15 mm, B magnet: Ø10 x 4 mm
Operational temperature range:	II. Indoor general -10 to +40 °C
Classification:	grade 2
Complies with:	according to: EN 50131-1, EN 50131-2-6, EN 50131-5-3 ETSI EN 300220, EN50130-4, EN55022, EN 60950-1
Can be operated according to:	ERC REC 70-03



JABLOTRON ALARMS a.s. hereby declares that the JA-183M is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The original of the conformity assessment can be found at www.jablotron.com.

Note: Although this product does not contain any harmful materials we suggest you return the product to the dealer or directly to the producer after use.